

LCD ERROR CODES

7 TROUBLESHOOTING ERROR CODES

These error codes will display in the speed section of the LCD.

If you don't see an error code listed, please call 1-866-882-3245 or e-mail us at support@ebikekit.com



ERROR CODE	DEFINITION	CAUSE
01	Motor Connection/Halls	<ul style="list-style-type: none">▪ Motor cable isn't plugged in all the way.▪ Bent pin or damaged wire on the motor cable.
02	Throttle Issue	<ul style="list-style-type: none">▪ Bent pin on the 4-to-1 (or 3-to-1 E-TrikeKit) wire.
03	Controller Issue	<ul style="list-style-type: none">▪ Bent pin on the 4-to-1 (or 3-to-1 E-TrikeKit) wire.
04	Low Voltage Issue	<ul style="list-style-type: none">▪ Damaged motor cable (short circuit).▪ Controller or motor problem.
05	Phase Issue	<ul style="list-style-type: none">▪ Motor cable isn't plugged in all the way.▪ Current is too low for conditions.
06	Torque Issue	<ul style="list-style-type: none">▪ Controller or motor problem or bent pin.
07	Communication Issue	<ul style="list-style-type: none">▪ Controller or motor problem or bent pin.▪ 4-to-1 (or 3-to-1 E-TrikeKit) accessory cable or controller may be damaged.